
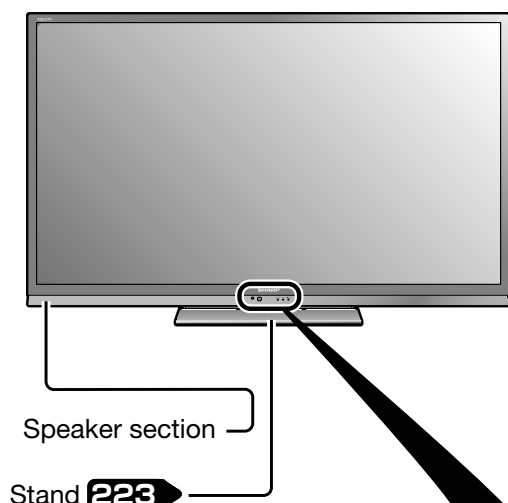


English Guide

Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

Front view



Speaker section


Stand **223**

Ambient illumination sensor window **75**

Remote sensor window **24**

- When using the remote control, point its head toward this window.

Right side view

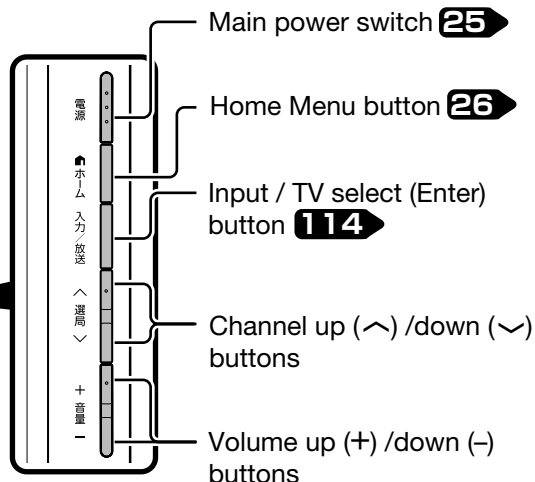

Main power switch **25**

Home Menu button **26**

Input / TV select (Enter) button **114**

Channel up (∧) /down (∨) buttons


Volume up (+) /down (-) buttons

Timer program indicator **62·97·107·137**


Recording indicator **135**

Power indicator **25**

Left side view

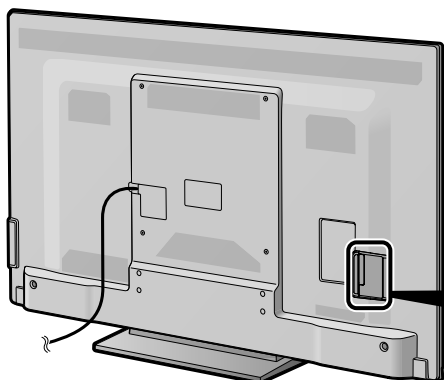


- IC chip side of B-CAS card is turned to a front side of this product, and B-CAS card is inserted.

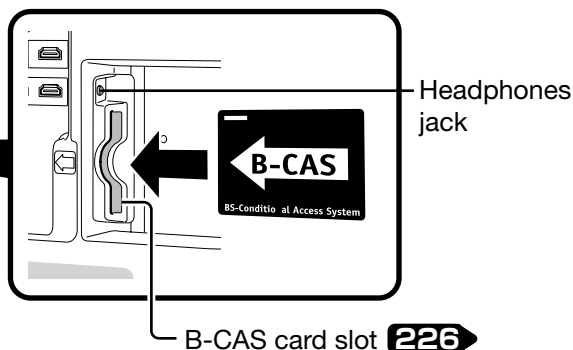

Headphones jack

B-CAS card slot **226**

Back view

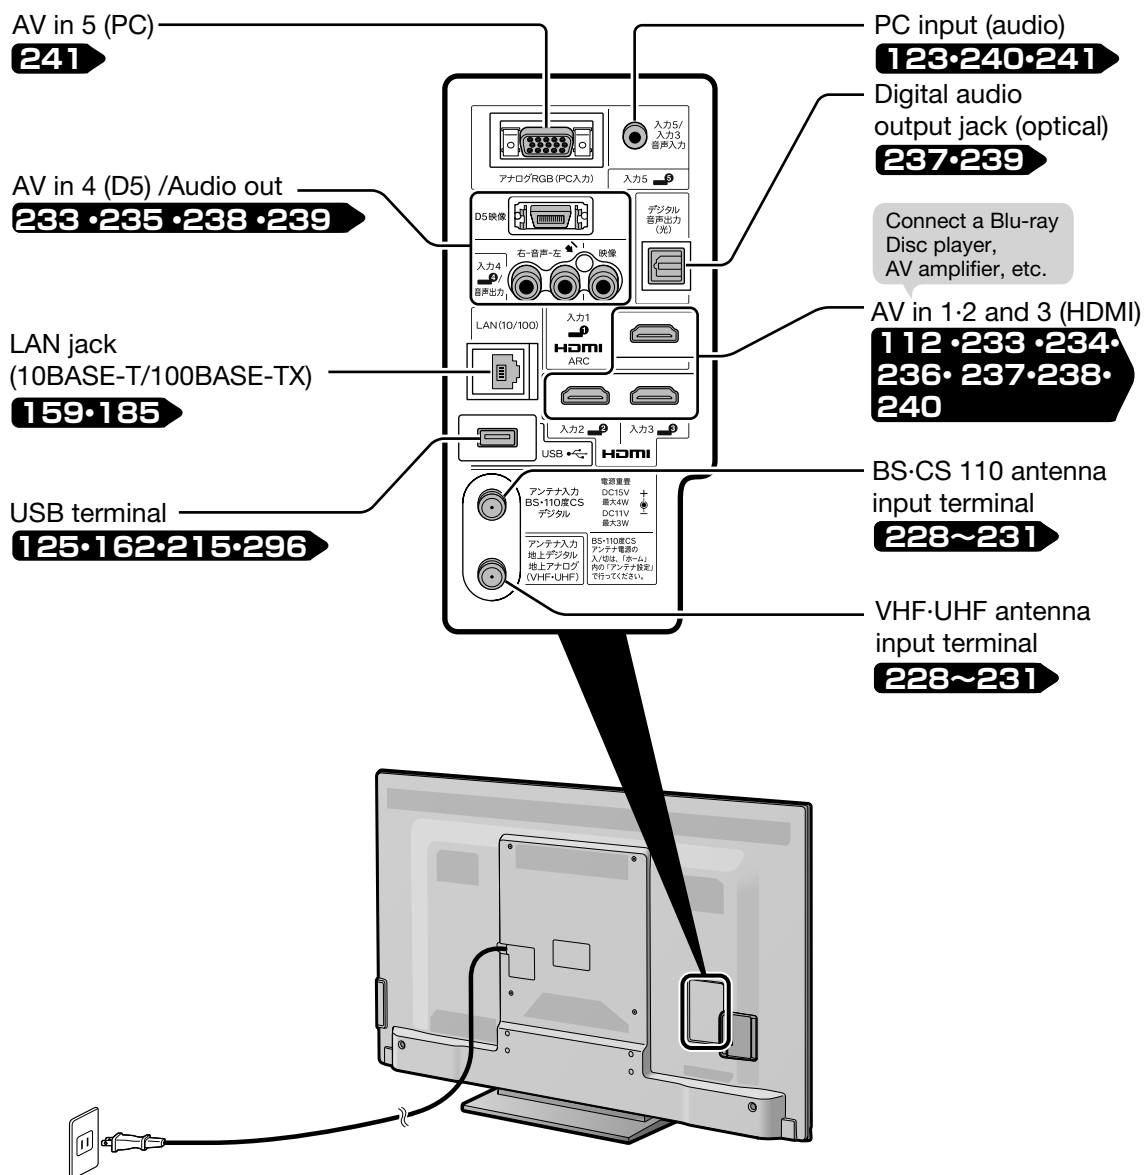

はじめに
お読みください

テレビを見る／
便利な使いかた

ファミリンク

ビデオ・オーディオ・
パソコンをつなぐ

USBハードディスク
をつないで録る・見る

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や索引)

English
Guide

Remote Control Unit

Active/Standby **25**

Press to engage the TV set in the active or standby mode.

字幕 **Caption** **58 • 191**

Press to display, select, or turn off captions when watching a digital program with captions.

3桁入力 **Digital channel number input** **33**

Use to select a digital channel by entering the 3-digit channel number.

(CATV) **CATV** **33**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10).

消音 **Mute** **31 • 190**

Press to mute audio.

+ 音量 **Volume up (+)/down (-)** **31 • 190**

Press to adjust the volume.

データ連動

d **Linked data broadcast** **34 • 191**

Press to call the data broadcast linked with the current digital TV program.

AVボジション

AV mode select **71**

Press to select the picture/sound setting that best matches the current program.

オフタイマー

Sleep timer **88**

Press to select the remaining time period after which the TV set automatically enters the standby mode.

ファミリンク

Familink **102 • 112 • 134 • 145 • 148**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

番組表 **EPG** **44 • 106 • 137**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

ホーム **Display the "Home" Menu** **26 • 27**

Press to start some useful operations of the TV.

番組情報

Program info **37**

Press to display detailed information on the current digital program.

Finish

Press to finish menu operation, etc.

SAVE mode **91**

Press to change to the SAVE mode.

Freeze **35**

Press to freeze the picture.

Familink **102~105 • 107~110 • 135 • 136 • 146~149**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

常連番組

Recommended programs select **52~53**

Press to select a program which the TV set recommends.

画面表示

Display **36 • 37 • 301**

Press to display or turn off the channel call, etc.

インターネット

Internet **175 • 190 • 194 • 196 • 198**

Press to connect to the internet.

VOD操作 **VOD** **195 • 199 • 211**

Press to display the VOD control panel.

Channel select **31 • 190**

- Press to select a channel.
- Use to input a number for various settings.

地上D **Terrestrial digital select** **31**

BS **BS select** **31**

CS **CS select** **31**

地上A **Terrestrial analog select** **31**

When selecting the CS digital channel for the first time. **249**

選局 **Channel up (Δ)/down (∇)** **31 • 41 • 190**

Press to select channels in the ascending or descending order.
* CATV channels are factory set to be skipped. **267**

入力切換 **Input select** **114**

Press to select the input.

Display the Tool Menu **26 • 27 • 30**

Cursor (up, down, left, right) **26 • 27**

Use to select a menu item, column, etc.

決定 **Enter/Confirm** **26 • 27**

Press to confirm a selected setting or menu item.

Return **26**

Press to go back to the previous screen.

青 赤 緑 黄 **Color** **34 • 45~49 • 92**

Use to operate EPGs and data program screens.

画面サイズ

Screen mode **67 • 121**

Press to select the desired screen mode.

映像切換

Picture select **58**

Press to select the desired picture when watching a digital multi-picture program.

音声切換

Audio select **58 • 191**

Press to select the audio.

テレビデータ

Media select **31 • 34 • 191**

Press to select the media (TV or data).

2画面


Split screen **54~55**

Press to switch between the split screen mode and the normal screen mode.

操作切換

Operable screen **56**

Press to switch the operable screen when the TV set is in the split screen mode.

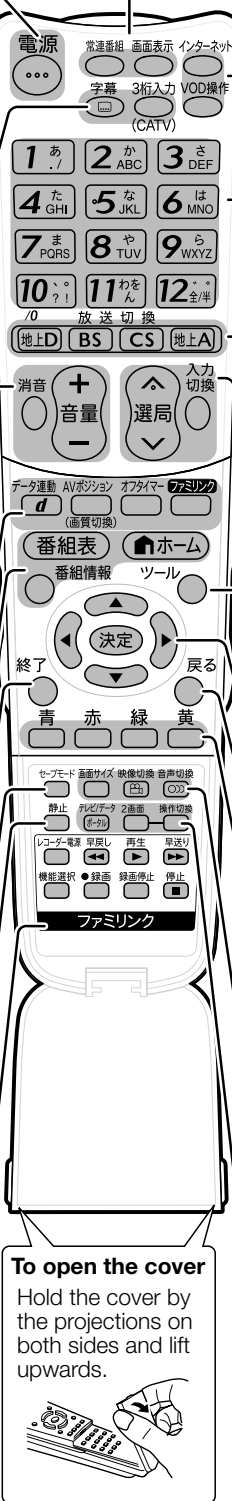

To open the cover

Hold the cover by the projections on both sides and lift upwards.



Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press
 and
select with

Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



2

Select with

Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



3

Select with
 Press

Select “Language (言語)”.
「Language (言語)」を選ぶ



4

Select with
 Press

Select “English”.
「English」を選ぶ

Enter.
決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

5

Press

Finish this operation.
終了する

はじめに
お読みください

テレビを見る／
便利な使いかた

ファミリンク

ビデオ・オーディオ・
パソコンをつなぐ

USBハードディスク
をつないで録る・見る

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や案外)

English
Guide